

# WINEGARD®

## Coax Connector Installation

### QUICK REFERENCE SHEET

#### TOOLS NEEDED:



SP-6311, RG-6  
Connector  
and Stripper

OR



SP-6311, RG-6  
Connector and  
CS-2000

#### STEP 4.




Fold back braid.

#### STEP 5.



Place connector on coax.

#### STEP 6.

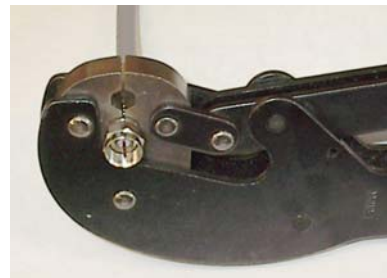


Crimp

#### STEP 7.



Inspect

#### STEP 8.

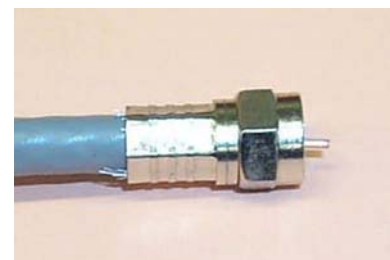

Tug on connector  
to test.

#### INSTALLATION

##### STEP 1.



Square cut

##### STEP 2.



Insert coax into stripper.

##### STEP 3.



Strip coax.